

NEW T-BOX

Istruzioni per l'installazione, l'uso e la manutenzione
Assembling instructions and maintenance
Montage - und Wartungsanleitung
Instructions relatives à l'installation, l'utilisation et la maintenance



1
2
3
4
5



CONTROLLI PRELIMINARI







PRESSURE LOSS / PUMP CHARACTERISTICS

TECHNICAL DATA



For further informations about the pumps please read the Wilo manuals into the packaging







CONNECTING CHAMBERS:
The connection between flow and return
chambers allows the management of a
system with several interacting circulators.

VORPRÜFUNGEN



VERBINDUNG GFE

8. _____



CHAMBRES COMMUNICANTES
La communication entre les chambres de refoulement

8. _____

